


Peak 47

Built-in Altimeter, Barometer and Thermometer

Quick Guide

2.0 Major Function Flow

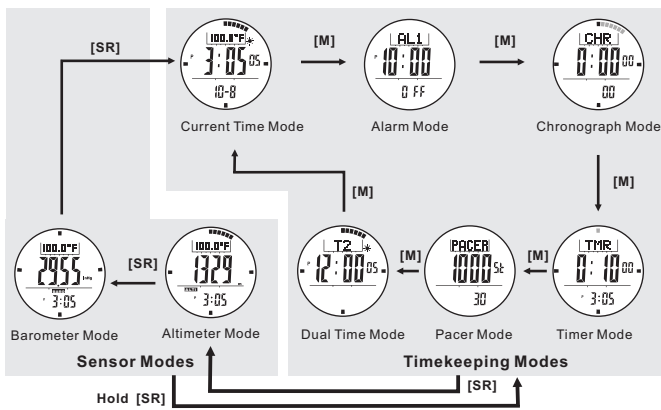

1.0 Button Operation

[SR] - SENSOR Button

- Select among Sensor Modes

[LT] - LIGHT Button

- Turn on EL Backlight for 3 seconds

[M] - MODE Button

- Select among Timekeeping Modes
- Hold this button to enter Setting display
- In Chronograph Mode, Hold this button to select Lap display

[L/R] - LAP/RESET Button

- In Chronograph Mode, press to take a Lap record

[S/S] - ST./STP. Button

- In Altimeter / Barometer Mode, press to select temperature/functional display, hold to select display unit
- In Chronograph / Timer / Pacer Mode, press to start or stop counting
- In Setting display, set the different settings

3.0 Function Overviews - Timekeeping Modes

Current Time Mode

Day of Week/ Temperature/ Altitude Trend/ Pressure Trend

Weather Forecast: Sunny, Cloudy, Cloudy with Sun, Raining

Time (Hour, minute, second)

Date

Second

- Hold down [M] for 2 seconds to enter Time and Date setting display
- Press [S/S] to select Day of Week, Temperature, Altitude Trend and Pressure Trend display

Alarm Mode

Alarm Time (Hour, minute)

Chime Indicator

- Hold down [M] for 2 seconds to enter Alarm setting display
- Press [S/S] to select Alarm 1, Alarm 2, Chime display
- Press [L/R] to turn ON / OFF Alarm or Chime

3.0 Function Overviews - Timekeeping Modes

Timer Mode

Count down target (Hour, Minute, Second)

Current Time

Second

- Press [S/S] to start counting
- Press [S/S] again to stop counting
- Hold [L/R] to reset the counter
- Hold down [M] for 2 seconds to enter Timer setting display

Pacer Mode

Steps

Beeping rate

- Press [S/S] to start / stop pacer
- Hold [L/R] to reset steps counter
- Hold down [M] for 2 seconds to enter beeping rate setting display

5.0 Battery Replacement

Low battery indicator

Twist the battery door anti-clockwise

Remove the battery door and take away the old battery

Replace the new battery and close the door

Twist the battery door clockwise to lock the door

Note: Beware the o-ring is in the right position or not

3.0 Function Overviews - Timekeeping Modes

Chronograph Mode

Elapsed Time (Hour, Minute, Second)

Counting indicator (1/10 sec.)

1/100 second

Lap number

- Press [S/S] start counting
- Press [L/R] to take Laps
- Press [S/S] again to stop counting
- Hold [L/R] to reset the chronograph when stop counting
- Hold down [M] for 2 seconds to enter Laps recall display

Dual Time Mode

Dual Time (Hour, Minute, Second)

Second

Dual Time Indicator

- Hold down [M] for 2 seconds to enter Dual Time setting display

4.0 Function Overviews - Sensor Modes

Altimeter Mode

Altitude

Current Time

Temperature/Altitude history

Second

- Hold down [M] for 2 seconds to enter altimeter setting display
- Hold [S/S] to change the unit
- Press [S/S] to select Temperature or Altitude history display

Barometer Mode

Pressure

Current Time

Sea-level pressure/ Pressure Trend/ Temperature

Second

- Hold down [M] for 2 seconds to enter Barometer setting display
- Hold [S/S] to change the unit
- Press [S/S] to select Sea-level pressure, Pressure Trend and Temperature display